



----- **BR-4 Device codes** -----

- 711 SP1.7/SP2
- 712 B100/B135/BP16/BP17
- 715 BCD1, BCD3
- 716 BDA1, BDA2
- 717 BDA3, uses device ID 6
- 719 BDP3, uses device ID 9
- 721 BP25/BP26
- 722 B60/BP6
- 750 Select D/A to use the BDA3.14 volume control.
Select Preamp to use the preamp volume control.
- 751 Preamp volume control is used in either D/A or Preamp mode.

----- **Reset to factory default** -----

Press 'CODE' for 5 seconds, until LED blinks.
Release 'CODE' button.
Press '795', LED will blink 4 times.

----- **Volume Function** -----

By default, the volume buttons control the programmed pre-amp even when that mode is not selected

To use the BDA3.14 volume control:

Press 'CODE' for 5 seconds, until LED blinks, release 'CODE' button. Press '717', LED will blink 2 times.
Press 'CODE' for 5 seconds, until LED blinks. Release 'CODE' button. Press '750', LED will blink 2 times.

To use the pre-amp volume control:

Press 'CODE' for 5 seconds, until LED blinks. Release 'CODE' button. Press '751', LED will blink 2 times.