

# BRYSTON

**7BSST<sup>2</sup>**  
OWNER'S MANUAL

## IMPORTANT SAFETY INSTRUCTIONS



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.**

**DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ARE PLACED ON THE EQUIPMENT.**

**TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE.**

**THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE.**

## BRYSTON LIMITED WARRANTY

Bryston analog audio products are warranted to be free from manufacturing defects for twenty (20) years from the original date of manufacture. The warranty includes parts and labour.

Bryston Digital products and cables are warranted for five years from the original date of manufacture. The warranty includes parts and labour.

Bryston products having motorized moving parts, excluding motorized volume controls, are warranted for three years from the original date of manufacture. The warranty includes parts and labour.

Bryston will remedy the problem by repair or replacement, as we deem necessary, to restore the product to full performance. Bryston will pay shipping costs one way (usually the return portion) during the first three years of warranty coverage.

In the event of a defect or malfunction, contact Bryston's repair centers for return authorization. Products must be returned using original packaging material only. Packing material may be purchased from Bryston if necessary. This warranty is considered void if the defect, malfunction or failure of the product or any component part was caused by damage (not resulting from a defect or malfunction) or abuse while in the possession of the customer. Tampering by persons other than factory authorized service personnel or failure to fully comply with Bryston operating instructions voids the warranty. This warranty gives you specific legal rights and you may also have other rights which may vary from province to province and country to country.

As of 2006-02-22 Bryston will only warranty Bryston products purchased through authorized Bryston dealers. Bryston products with a date code of 0608 or higher (date code format is "yyww", where "yy" is the two least significant digits of the year and "ww" is the week of the year) must be accompanied by a copy of the bill-of-sale from a Bryston authorized dealer to qualify for warranty service. The warranty is transferable from the original owner to a subsequent owner as long as a copy of the bill-of-sale from the original authorized Bryston dealer accompanies the re-sale. The copy of the bill of sale to any subsequent owner need ONLY include the Name of the Bryston Authorized Dealer and the Model and Serial number of the Bryston product. The warranty will only be honored in the country of the original purchase unless otherwise pre-authorized by Bryston.

### BRYSTON SERVICE in CANADA:

Postal address: **PO. BOX 2170, Stn. Main  
PETERBOROUGH, ONTARIO  
CANADA K9J 7Y4**

Courier address: **677 NEAL DRIVE  
PETERBOROUGH, ONTARIO  
CANADA K9J 6X7**

PHONE: 705-742-5325  
FAX: 705-742-0882  
E-mail: [cdnser@bryston.com](mailto:cdnser@bryston.com)

### BRYSTON SERVICE in the USA:

**79 COVENTRY ST., Suite 5  
NEWPORT, VERMONT  
U.S.A. 05855-2100**

PHONE: 802-334-1201  
FAX: 802-334-6658  
E-mail: [usaser@bryston.com](mailto:usaser@bryston.com)

### BRYSTON SERVICE outside Canada and the USA:

contact your local distributor or

CHECK OUR WEB SITE: [www.bryston.com](http://www.bryston.com)  
E-MAIL BRYSTON DIRECTLY: [cdnser@bryston.com](mailto:cdnser@bryston.com)  
FAX BRYSTON DIRECTLY: 01-705-742-0882  
PHONE BRYSTON DIRECTLY: 01-705-742-5325

**TABLE of CONTENTS**

Safety Instructions, Warranty and Contact Information .....**Opposite**

**General Information** ..... **Page 1**

- Introduction & Description
- Installation & Ventilation
- Wiring the Amplifier
- A/C Power
- A/C Power Conditioners

**FRONT PANEL**

- Power Switch
- LED Indicator

**REAR PANEL** ..... **Page 2**

- Input Selector Switch
- Balanced Input Connector (XLR)
- Single Ended Input
- Gain Select Switch ..... **Page 3**
- Level Control (PRO models only)
- Outputs (Binding Post Connectors)
- Circuit Breaker/Power Switch
- A/C Power Inlet ..... **Page 4**
- External Turn-On Selector Switch
- External Turn-On Connector

Technical Specifications

Exterior Dimensions ..... **Back Page**



Front view of 7BSST2 with 19 inch Silver C-type faceplate & handles

## INTRODUCTION

Thank you for choosing the **7BSST<sup>2</sup> mono block Power Amplifier**.

Bryston welcomes any suggestions you may have, or comments regarding the operation of your amplifier. We consider you, our customer, to be Bryston's most important resource, and your opinion is very much appreciated.

## DESCRIPTION

The 7BSST<sup>2</sup> is a single channel mono 600 Watt audio power amplifier. The 7BSST<sup>2</sup> selects a balanced or single ended input and a gain of 29dB or 23dB may be selected. The 7BSST<sup>2</sup> includes 'soft start' power control circuitry to eliminate high inrush currents when A/C power is applied. The power up or turn-on of the 7BSST<sup>2</sup> may be activated by a remote control voltage 4v to 12v A/C or D/C.

## SHIPPING BOX & PACKING MATERIAL

Please keep the original shipping box and all packing material. This will ensure the amplifier is protected in future transport. In the unlikely event you have a problem and must return it for service use the proper packing material. Ship the amplifier only in the original packing material, as the unit is not insurable by carriers otherwise.

## INSTALLATION

**Ventilation.** The most important installation consideration is ventilation. The 7BSST<sup>2</sup> amplifier is convection cooled. Unrestricted air-flow across the 7BSST<sup>2</sup> heat sinks is a must. For this reason do not install anything directly above it. Allow 3.5" (2u) to 5.25" (3u) inches of space above and to the sides of this amplifier. Do not install directly above other heat generating equipment. Should your installation conditions be constricted, then additional forced air-cooling may be necessary. Bryston can provide an optional fan package if required. Thermal shut down during operation indicates insufficient air flow, and a remedy must be found for cooling the amplifier. Provide a minimum 6" space to the rear of the amplifier for ventilation and dressing cables to and from the amplifier.

**Never operate the amplifier in a vertical position.**

## WIRING THE 7BSST<sup>2</sup> AMPLIFIER (also see rear panel description )

**Speaker wires** should be as short as practical. Use quality wire, and if runs are more than 3 meters use at least 12 gage wire. The speaker binding posts will accept wire up to 3 gage in size. Bryston offers speaker cables and amp interconnects for your application. Check our website under products/cables ([www.bryston.com](http://www.bryston.com)) for more information.

## A/C POWER

Before plugging in the power cord be sure your 7BSST<sup>2</sup> amplifier is specified for the **correct A/C voltage** for your locality. The voltage is listed on the label found at the upper right of the rear panel. The circuit feeding the 7BSST<sup>2</sup> should be sufficient so as not to cause the circuit breaker to trip (15 amp min.). Note: the 7BSST<sup>2</sup> when delivering maximum power into a 4 ohm load, will consume all the available power in a normal household circuit, therefore a dedicated electrical circuit may be necessary with this situation. Never lift the safety ground to the amplifier nor remove the ground pin from the plug.

## A/C POWER CONDITIONERS

Bryston urges caution in choosing a power conditioner for your audio/video system. Large power amplifiers can draw very substantial current from the wall plug, and many so-called power conditioners can in fact hinder the supply of current by inserting resistances in series with the line cord. However, there are now power conditioners that can reduce or eliminate RF and 'hash' from the AC supply and may actually improve current delivery to your system. This type of power conditioner (exemplified by 'TORUS' Power Conditioners) uses the energy storage in a large toroidal transformer to provide high instantaneous power and reduce the substantial AC output resistance of the wall socket and house wiring. This resistance can be in the range of 0.5 to 1 Ohm and is typically reduced to only a few milli-ohms by the Power Conditioner. That in turn considerably reduces Voltage drop in the power line on high current surges and quite substantially increases the stability of the power line improving audio (and video) focus, precision and clarity.

## FRONT PANEL

### "7BSST<sup>2</sup>" Power Switch

The front panel label 'SST POWER', is an alternate action push button switch (push ON, push OFF) used to apply or remove A/C line power to the soft start circuitry. Push in to initiate the power-up sequence. Push again and release to power down the amplifier. ( Note: the rear circuit breaker must be on for the amplifier to power-up)

## LED Indicator

The 7BSST<sup>2</sup> has a single LED indicator to monitor the following conditions:

UNLIT	• indicates the amplifier has no power.
RED	• indicates the amplifier is muted (power-up)
GREEN	• indicates the amplifier operation is normal.
FLASHING RED	• indicates the amplifier clipping.
ORANGE	• indicates channel thermal shutdown.

### Power-Up Sequence

After pushing the front panel power switch, the LED will turn from unlit to red (mute). When the power supply has stabilized the amplifier will come out of mute and the LED will change to green (normal operation).

### Unlit LED (No power)

The 7BSST<sup>2</sup> LED when unlit indicates no A/C mains power is present and the amplifier probably needs only to be powered on. Ensure that the rear panel circuit breaker is switched ON.

### Clipping (flashing red)

Clipping occurs when the channel output level no longer can follow the level increase at the input (Over driven input condition). When the 7BSST<sup>2</sup> is driven into clipping the LED will change from green to red then back to green when the level is reduced ( Flashing Red ). Momentary clipping can be tolerated, however it indicates that maximum un-distorted power has been surpassed and potential speaker damage may result if overload conditions persist. Any amplifier that is constantly operated into clipping indicates a more powerful amplifier is needed for that application.

### Thermal Shutdown (orange)

The 7BSST<sup>2</sup> has thermal shutdown circuitry to prevent damage due to overheating. Should thermal shutdown occur, the amplifier will mute, and the LED will turn orange indicating this condition. When the amplifier has cooled to a safe operating condition the 7BSST<sup>2</sup> will return to normal operation. Persistent Thermal shutdown indicates steps need to be taken to increase airflow across the heat sink.

*Also see installation section on ventilation.*

**N.B.** In some markets the LED indicators, which are normally red/green, may be red/blue instead. When red/blue LEDs are supplied green is replaced with blue and orange is replaced with magenta in the above descriptions.

## REAR PANEL

### ① INPUT SELECT SWITCH

Gives the user the option of switching between either balanced input or single ended input.

### ② BALANCED INPUT CONNECTOR


This input connector accepts standard 'XLR' or 1/4" Tip-Ring-Sleeve phone plugs. Use quality, 100% shielded cables with *gold plated* connectors.

### ③ SINGLE ENDED INPUT ( *Un-balanced input* )

This input connector accepts standard 'RCA' or 'Phono' connectors. Use quality, 100% shielded cables with *gold plated* connectors.

#### **Balanced input Vs Single ended input:**

The balanced input requires a balanced pre-amp source. Balanced systems provide noise rejection from external electrical interference, so cable length can be very long ( 50m or longer ). The single ended or unbalanced input is provided for pre-amps without balanced output. Single-ended cables should be kept to 20' (7m) or less. In general never use longer cables than necessary, never coil excess cable length, and keep signal wires away from AC power or speaker cables.

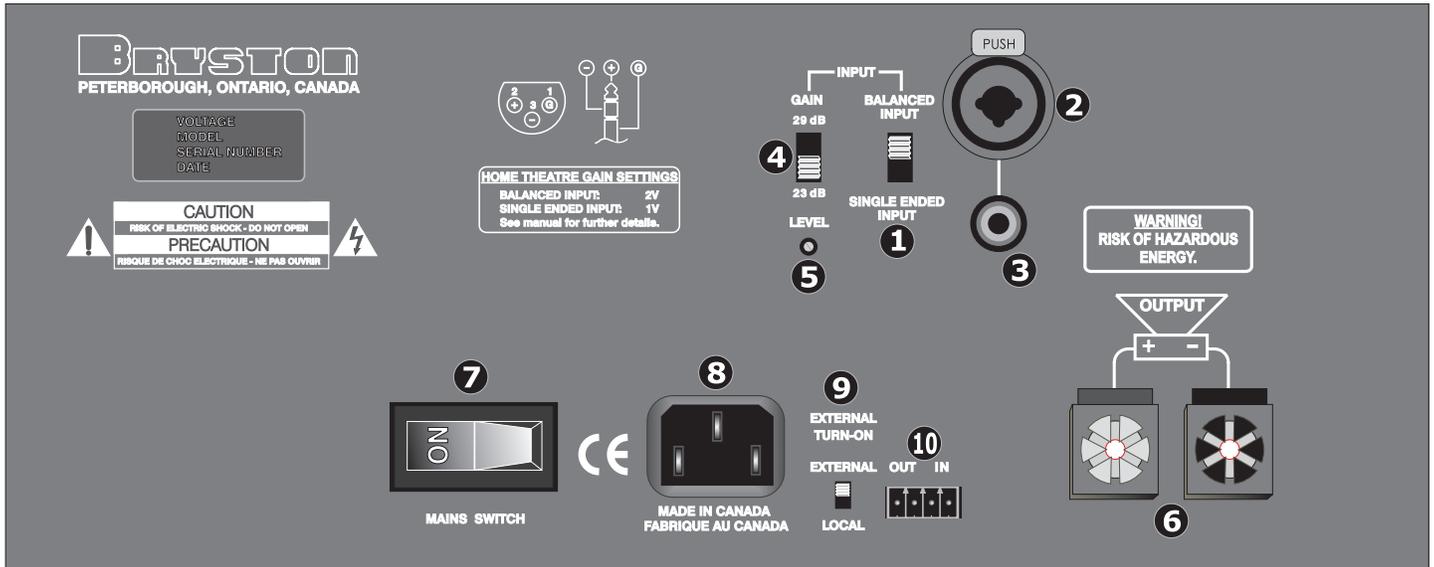

**4 INPUT GAIN SWITCH**

The optimum gain setting will depend upon the source pre-amp operating level and/or personal preference. The **29dB** setting will provide an output of 100 Watts into 8 Ohms (or 28.28Vrms into 8Ω) with an input signal of 1Vrms. The **23dB** setting will provide the same output level with a 2Vrms input signal. It should be noted that the balanced input, when driven with a balanced signal, will have an inherent 6dB gain increase relative to the single ended input. Using the lower gain setting of 23dB for balanced inputs and the higher gain setting of 29dB for single ended inputs thus allows for the same output levels with the same input levels regardless of which input is used.

**5 LEVEL CONTROL (PRO models only)**

The level control will attenuate the input signal level from 0dB through -14dB.

**6 OUTPUT BINDING POSTS**

The **RED** binding post (+) is the *in-phase* amplifier output. Connect this post to the (+) terminal on the loudspeaker. The **BLUE** binding post (-) is the *inverted-phase* amplifier output. Connect this post to the (-) terminal on the loudspeaker.

**NOTE: At no time should either output be connected to a ground or chassis. Failure of the amplifier may result. Never connect either output in parallel with another amplifier. The minimum recommended loudspeaker load is 4 ohms.**

The Output binding posts provide three different interconnect options. Combinations may be used when bi-wiring. See figure 2 below. Cables should be kept as short as practical and should never be terminated with connectors that may become confused for AC power connectors. Cables should be dressed away from input and power cables.

[a] **Banana plugs** offer a quick disconnect option. Before inserting a banana plug into the binding post be sure to tighten the post nut to avoid rattling and to provide full insertion of the banana plug. Gold plated locking banana plugs are available from Bryston.

[b] **Spade lugs** provide high contact area and secure fastening. Lugs should be gold plated. See diagram for details. Post diameter is 5/16" ( 8mm ), lug width 5/8" (16 mm). Gold plated spade lugs are available from Bryston.



[c] **Stripped bare wire** up to 3 gage can be inserted through the hole in the binding post and held in place by tightening the post knob. Additional tightening pressure can be achieved using a **coin** in the slots of the knob. Do not over tighten or the binding post may become damaged. Note that copper wire is malleable and may require further tightening after the initial installation.

**7 MAINS BREAKER/POWER SWITCH**

Must be ON for the amplifier to operate and for the amplifier to be turned on remotely. This is a combination power switch and magnetic trip circuit breaker. This switch should be 'OFF' during installation. When switched 'OFF' all A/C power is removed from the amplifier, including standby power. Use the front panel push button POWER switch or an external control voltage to Power-up or Power-down the amplifier. Should the breaker trip, lower or remove the ampli-

fier input signal. Switch the breaker to the 'ON' position. Then power the unit up normally.


**⑧ IEC-320 C14 POWER INLET**

Accepts power cords with IEC-320 C13 connectors. Use only approved power cords.

**⑨ EXTERNAL TURN-ON SELECTOR (EXTERNAL/LOCAL)**

**LOCAL operation:** To operate only via the front panel push-button power switch, place the External Turn On selector in the LOCAL position. If a control voltage is present at the 'IN' terminals it will still be available at the 'OUT' terminals after the power-up sequence.

**EXTERNAL (Remote) operation:** To enable remote power ON/OFF control of the amplifier this switch must be in the EXTERNAL position. Supply a 4v to 12v A/C or DC control voltage to the 'IN' terminals of connector ⑩. Use paired wire of 22 to 18 gage sufficient in length between the source device and the SST amplifier. Set Selector switch ⑨ to "External". The amplifier will now power-up only when the control voltage is present (on). Immediately following power up, the control voltage will appear at the 'OUT' terminals of connector ⑩ for the control of other equipment. The removal of the control voltage (0v) causes the amplifier to turn 'off' and the control voltage at the 'OUT' terminals is interrupted.

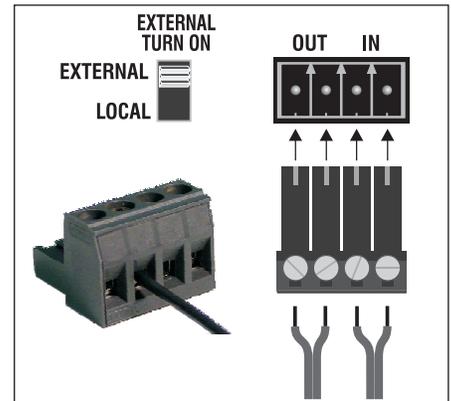

**REMOTE POWER TURN-ON PLUG-IN CONNECTOR**

Insert stripped ends of insulated wires revealing approx. 1/4" of bare, stranded copper wire between 24 and 12 AWG (.5mm to 2mm dia.) into open elevator style wire clamps & tighten with a slot screw driver. Do not over tighten or wires may eventually come lose. Maximum tightening torque is 4.5 lb-in (0.5Nm)

**⑩ REMOTE POWER ON/OFF CONTROL CONNECTOR**

To power-up the 7Bsst<sup>2</sup> amplifier using an external control voltage, connect 4 to 12 volts, AC or DC, to the IN pins of this connector with the External/Local switch ⑨ set to EXTERNAL. When this control voltage is removed the amplifier turns off. Use stranded wire between 22 and 18 AWG, with 1/4" of the insulation stripped off, to connect the control voltage to the interface connector shown at the right. Do not over tighten the wire-clamps; .5Nm or 4.5Lb-in is the maximum torque recommended. Then plug the interface connector into the EXTERNAL TURN ON connector.

**TECHNICAL SPECIFICATIONS**



PARAMETER	MIN	TYPICAL	MAX	UNITS	CONDITIONS
POWER OUTPUT		600		Watts	20-20K Hz into 8 Ohms
		900			20-20K Hz into 4 Ohms
SENSITIVITY		2.3		Vrms	for 600 Watts out into 8Ω, 29dB gain selected
		4.6			for 600 Watts out into 8Ω, 23dB gain selected
INPUT IMPEDANCE		15K		Ohms	balanced input (XLR)
		10K			single ended input (RCA)
THD + N			.005	%	20Hz to 20KHz at 600 Watts into 8Ω
			.007	%	20Hz to 20KHz at 900 Watts into 4Ω
NOISE		110		dB	Input shorted, 20Hz to 20KHz, gain set to 29dB
		113		dB	Input shorted, 20Hz to 20KHz, gain set to 23dB
SLEW RATE		60		V/μsec	
POWER BANDWIDTH	<1		>100K	Hz	
DAMPING FACTOR	300				at 20Hz, ref 8Ω
WEIGHT		25 (55)		Kg (lbs)	including box and packing (i.e. shipping weight)
POWER CONSUMPTION		215		Watts	at idle
		1284			at 600 Watts output into 8Ω
		1980			at 900 Watts output into 8Ω
HEAT DISSIPATION		733		BTU/hr	at idle
		2333			at 600 Watts output into 8Ω
		3684			at 900 Watts output into 4Ω

# 7Bsst<sup>2</sup> POWER AMPLIFIER

## 4B/7B SST C-Series POWER AMPLIFIERS EXTERIOR DIMENSIONS

FILE: 4B7Bsst-C-Series-EXTERIOR-DIMENSIONS.dwg  
 PART No: -  
 REVISION: 1  
 Revised: 2008-02-20  
 Created: 2003-04-29  
 BY: 

**BRYSTON** LTD.  
 P.O. BOX 2170, 677 NEAL DRIVE, PETERBOROUGH, ONTARIO, CANADA K9J 7Y4  
 PHONE: 705-742-5325 FAX: 705-742-0882 INTERNET: www.bryston.co

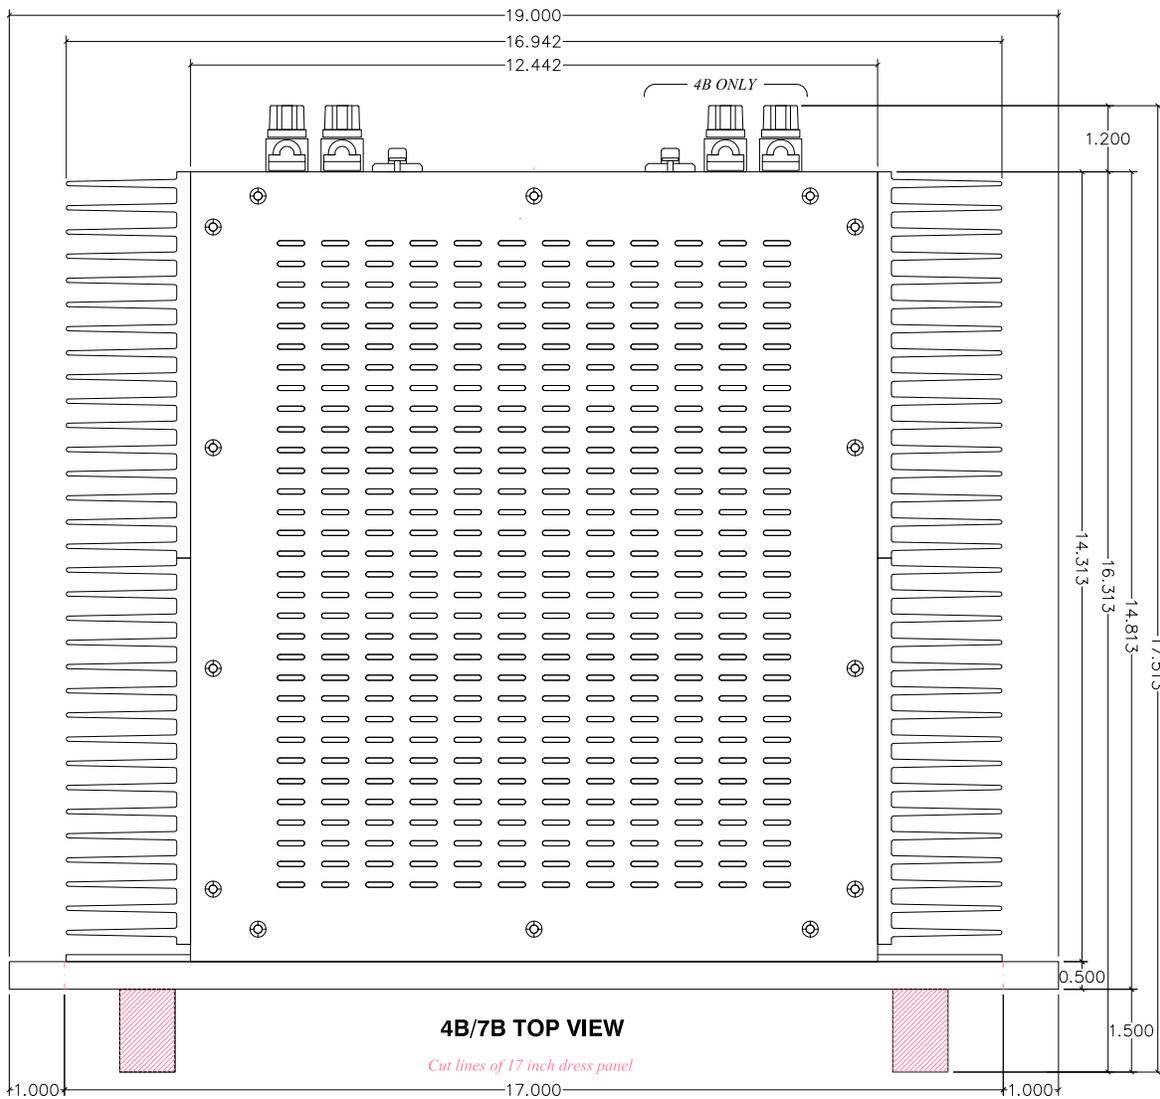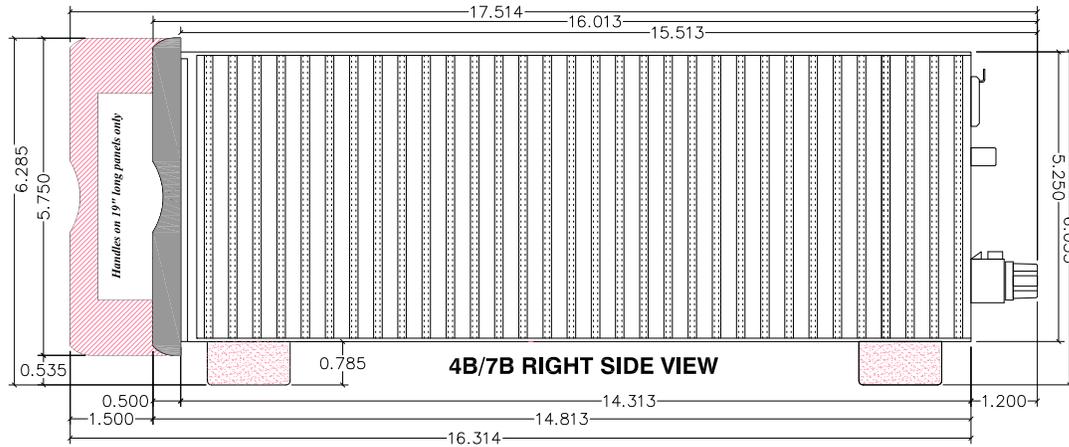

**On 17 inch units the dress panel is 2 inches shorter than the 19" panel (1 inch is removed from either end) and there are no handles.**  
 N.B. Height of rubber feet may vary by  $\pm 0.032"$

ALL DIMENSIONS IN INCHES